



## Programming Remote

In order for your remote to function properly, it needs to communicate with the ceiling light itself via the same transmitter code combination. Setting the code is fairly straightforward.

1. Power your ceiling light off using the wall switch or circuit breaker.
2. Remove the batteries from the hand-held remote.
3. Restore power to ceiling light.
4. Re-install batteries in hand-held remote.
5. Press and release ON button on the remote more than 5 times quickly within 30 seconds. If you see the light flashes 3 times, that means code setting is done.

P.S. Color temperature will be default to the last color when activated/preset only in the condition of using remote to turn on/off the light.